

Instructions for initial setup and use of the Juggernaut.Case VELOX Dock.

**** NOTE:** DO NOT operate when wet. If liquid gets onto the pins, dry the product before attempting to charge!**

- EUD must be equipped with a VELOX Smart Block to function with the Dock.

Product Specs:

P/N: JG.DOCKVX.S23.6

Dimensions (6 bay)

4.26" H x 7.08" W x 14.94" L

Weight (without cables)

9.5 lbs

Power Supply

Internal

Power Input

100-240V AC, 50/60Hz

Power Output

25W per slot

 
Data Transfer

Supports up to 1Gbps data speeds

Environmental


IP54 Rated *Do NOT submerge*

**** Juggernaut does not supply an MDM, end user must verify compatibility. ****

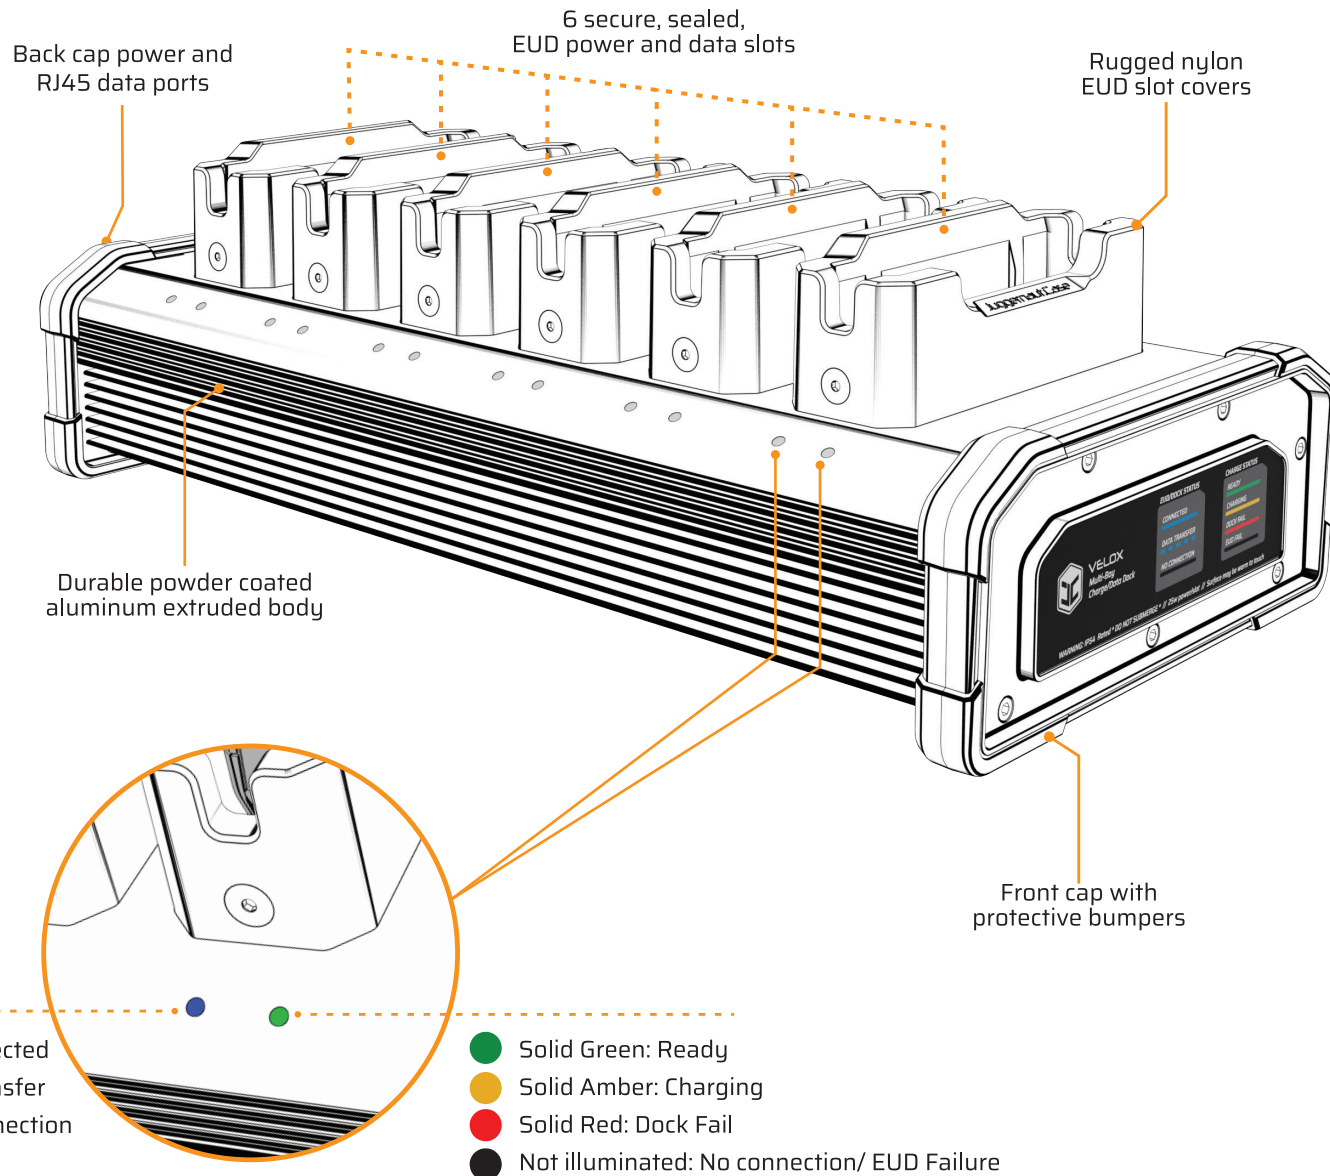

1 Power & Data: Back Cap

 
The back panel has one power receptacle and two RJ45 jacks. Use the provided power cable to power the dock.

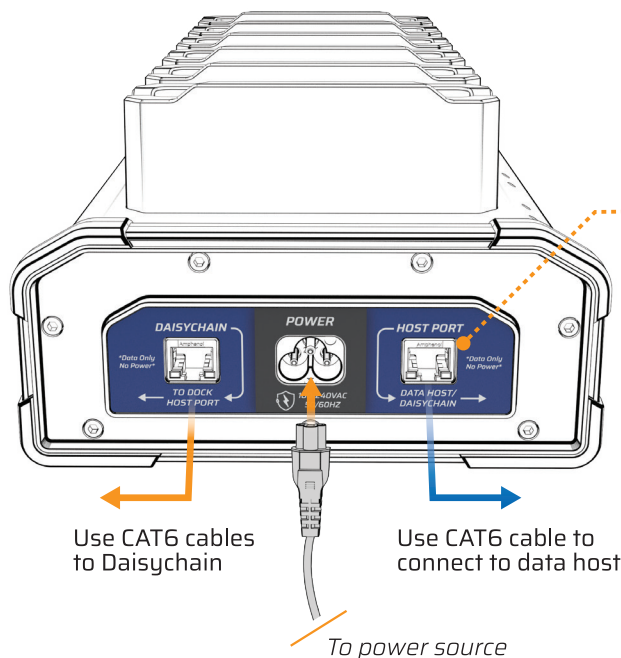

2 Inserting & Removal of EUDs:

Use firm but not aggressive downward pressure until the EUD is seated into the slot.

slight angle while inserting

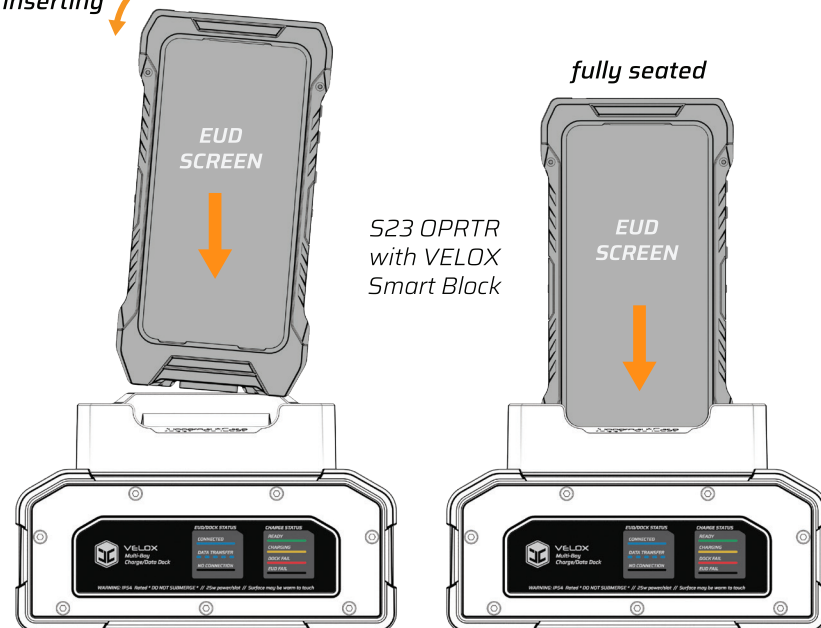

To remove, press down slightly, rock to the left or right until one side releases and then up and out.

3 DAISYCHAIN Setup:

Use a CAT6 Cable to connect Dock A HOST PORT to a Data Host.

Use another CAT6 cable to connect the DAISYCHAIN port on Dock A to the HOST PORT on Dock B. Continue sequence up to 5 total Docks

